

Door measuring guide


Complete interior & exterior door units



ROUGH OPENING = THE FRAMED HOLE

UNIT SIZE = THE OUTSIDE OF THE COMPLETE FRAME

ROUGH OPENING (RO)

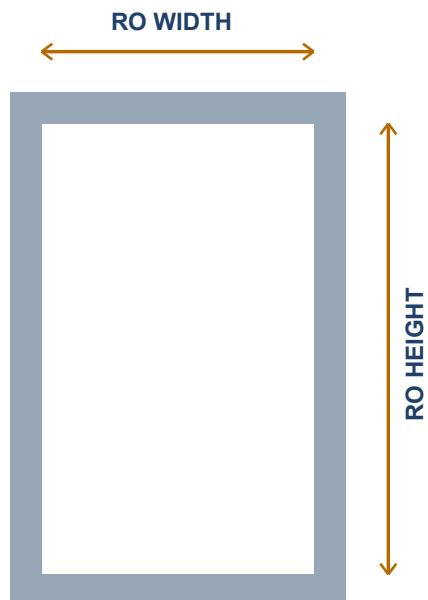


Exposed framing opening

WIDTH: Between the framing studs.

HEIGHT: From the support surface (usually subfloor) to the underside of the header.

Framing must be visible to measure RO.

UNIT / FRAME SIZE

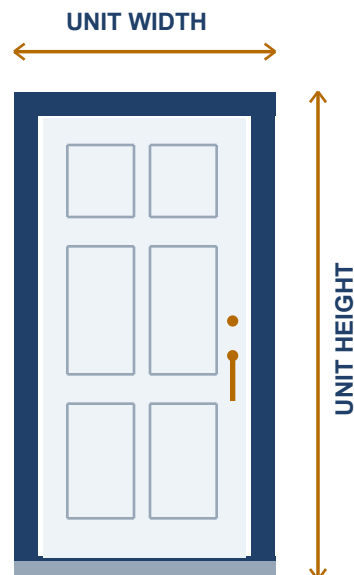

Outside dimensions of frame

WIDTH: Outside jamb to outside jamb.

HEIGHT: Top of the head jamb to the bottom of the sill, if supplied; for an interior unit without a sill, measure to the bottom of the jamb legs.

Exclude casing and brickmould.

ALSO CHECK

Jamb depth / wall thickness • Finished-floor changes • Sill height

Hinge side and swing direction • Include sidelites/transoms in overall size

For proper fit, measure opening width at the top, center and bottom; record all three.

BRICK HOMES: Measure width brick to brick; record separately from the rough opening.

CONFIRM BEFORE ORDERING

Record actual sizes. Sills, floor buildup and installation clearances affect the fit.

Have Fary Bros. or your installer confirm the required rough opening.

Window measuring guide


New construction & replacement windows



ROUGH OPENING = THE FRAMED HOLE

UNIT SIZE = THE OUTSIDE OF THE COMPLETE FRAME

ROUGH OPENING (RO)

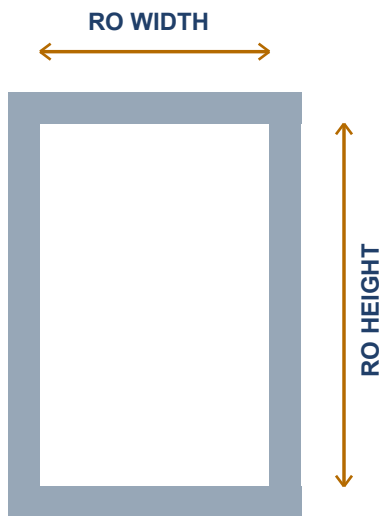


Exposed framing opening

WIDTH: Between the framing studs.

HEIGHT: Top of the framing sill to the underside of the header.

UNIT / FRAME SIZE

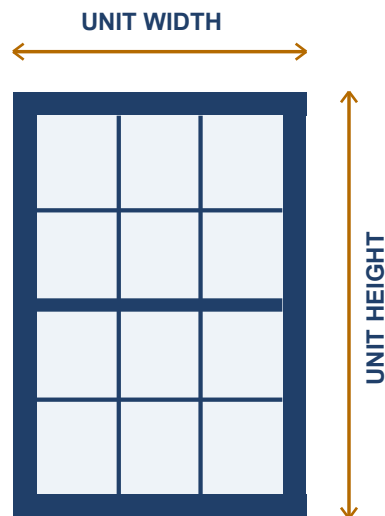

Outside dimensions of frame

WIDTH & HEIGHT: Outside edge to outside edge of the window frame.

Exclude trim and nailing flanges.

Do not measure just the glass or sash.

WHICH REPLACEMENT METHOD?

NEW CONSTRUCTION / FULL-FRAME REPLACEMENT

Use the exposed rough opening. For full-frame replacement, the old frame is removed.

INSERT REPLACEMENT

The old frame stays. Measure the opening inside that frame at the points specified by the new window's measuring guide. This is NOT the structural rough opening.

Measure width and height in three places; record all and note the smallest of each.

Check both diagonals, depth, level and plumb. Label every measurement type.

CONFIRM BEFORE ORDERING

Keep your original readings; do not subtract an assumed installation allowance.

Have Fary Bros. or your installer confirm sizing for the selected window.